



Sealing Boot for handiwork
& Elevator push Rod.

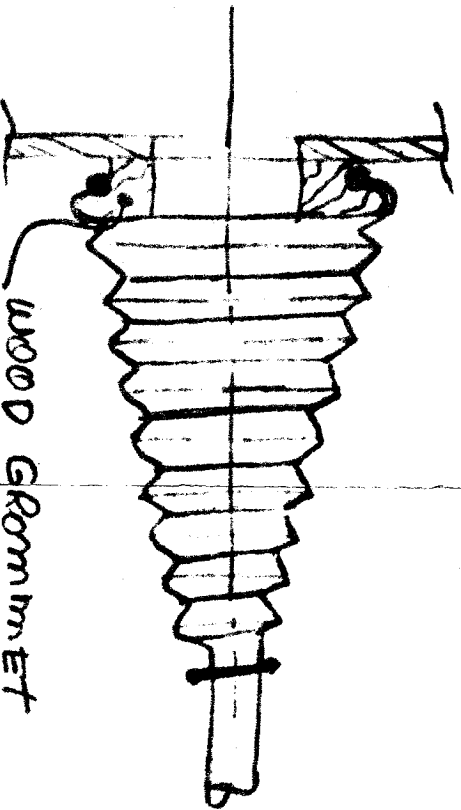


WOOD GROMMET
GLUED TO SIDE PANEL &
TOP FIN RIB.

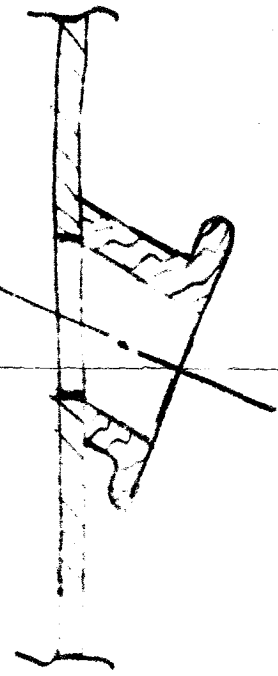

TOP FIN RIB ILLUSTRATION

The Boot is from early model
wood Civic Car.
Use GREASE to slide it on the
Rod. IT'S A REAL GOOD FIT. No
Clamp is required to fix it on
the Rod.

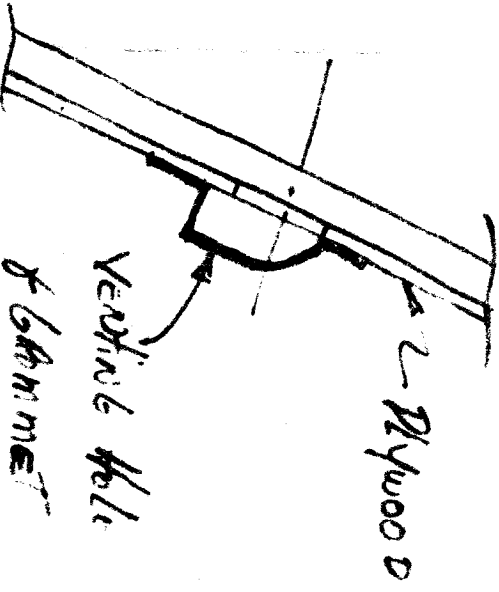

WOOD
VENTILATE HOLE
CLAMP